MOUNTING INSTRUCTIONS




PROCESSING TEMPERATURE

Please ensure that the outside temperature is at least 10°C when applying SEEN Elements.





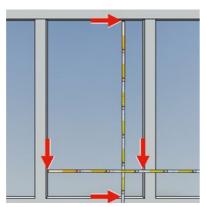


O2 Measure the height and width of the pane

10




03

Transfer measurements. Determine the number of dots and calculate the distance between dot and frame

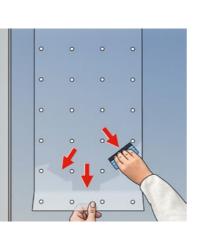


11

Remove cover film completely, then rub the carrier film down to the bottom

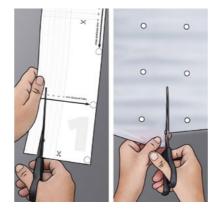


04

Cut template #1 to size and cut last the film sheet if necessary

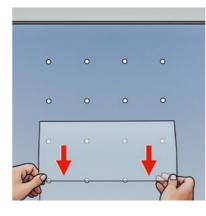


12

Peel off the carrier film flat along the pane

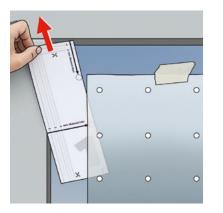


O8 Remove template

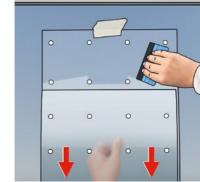

09

Peel off the matt cover film step by step from the right corner flat downwards, rub on the carrier film

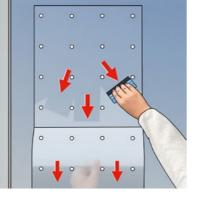


Rub the carrier film down-

wards and from the center


off the cover film gradually

outwards without wrinkles, peel

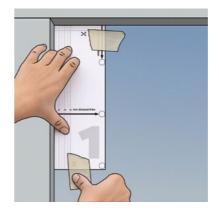


05

Fix template in the upper left corner of the pane

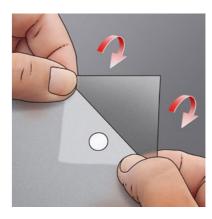


06

Fold back the upper right corner of the matt cover film

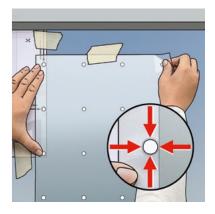


07

Align film to the template, fix with tape and at corner

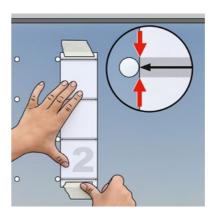


13

Align template #2 with dots and fix to pane

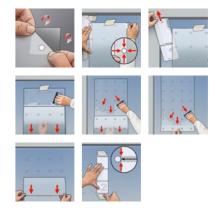


14

Repeat steps 06 to 13 if necessary

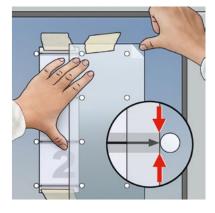


15


Align last film sheet cut in step O4 with the template, fix with tape and at corner

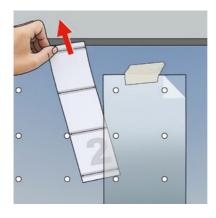

16 Remove template

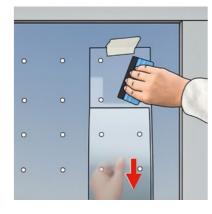


17 Peel off matt cover film flat downwards as in 09, 10, 11

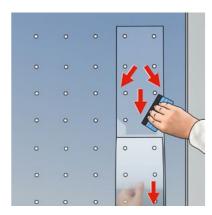


18

Peel off matt cover film and rub on carrier foil as in 09, 10, 11

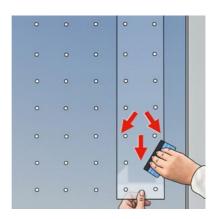


19

Rub the carrier film downwards and from the center to the outside without wrinkles

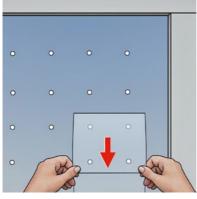

20

Peel off the carrier film flat along the pane

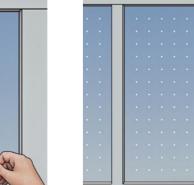

21 Final result

CLEANING OF SEEN ELEMENTS

Only use pH-neutral liquid cleaning agents free of solid particles. Use rubber wipers, soft cotton, microfiber cloths, or non-scratching, lint-free paper towels.



SEEN AG Lerchenfeldstrasse 3 9014 St. Gallen Switzerland

+41 71 351 25 96 hello@seen-group.com www.en.seen-group.com